QUICK START for the AP-1-9-C

1. Connect the (4) conductors from the POWER/CAN cable of the module

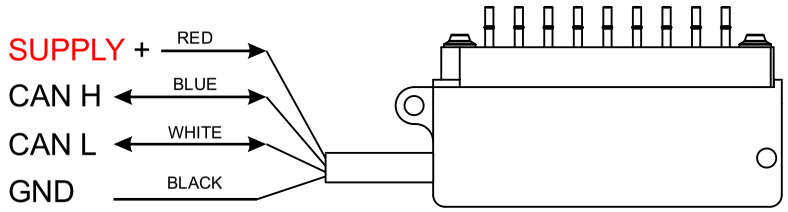

2. Your system should supply 6VDC to 30VDC between SUPPLY + (red) and GND (black)

3. Connect CAN H (blue) and CAN L (white) to your CAN Bus communication lines

4. Connect hoses to the tube fittings.

5. Note: Be sure you have 120 ohm termination resistors on each end of the CAN bus long-run, and branches no longer than 0.3 meter *per CAN Specification for 1Mbit/s rate

6. You should see the CAN messages streaming on your CAN system (default set at 1Mbit/s bit rate)

QUICK START for the AP-1-9-C

1. Connect the (4) conductors from the POWER/CAN cable of the module

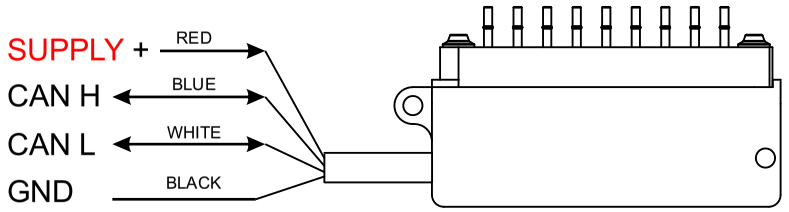

2. Your system should supply 6VDC to 30VDC between SUPPLY + (red) and GND (black)

3. Connect CAN H (blue) and CAN L (white) to your CAN Bus communication lines

4. Connect hoses to the tube fittings.

5. Note: Be sure you have 120 ohm termination resistors on each end of the CAN bus long-run, and branches no longer than 0.3 meter *per CAN Specification for 1Mbit/s rate

6. You should see the CAN messages streaming on your CAN system (default set at 1Mbit/s bit rate)

Rev. A 2026-10-26 go to techmor.com for more info TECHMOR