


# QUICK START for the ND-1

**1** Connect the (2) conductors from the POWER cable pair of the module only

These have heatshrink with two wires only (Red and Black)

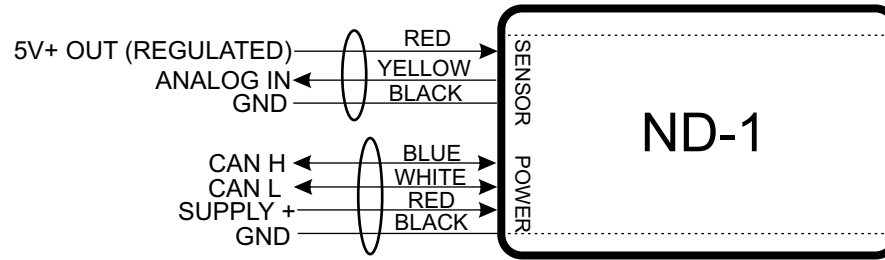

**2** Connect the 3 wire set (Red, Yellow, Black) to your sensor and the voltage will be displayed



Do not apply more than 5V on the analog input!

**3** Connect CAN H (blue) and CAN L (white) to your CAN Bus system

**4** Be sure you have 120 ohm termination resistors on each end of the bus and nodes no longer than 0.3 meter

\*per CAN Specification for 1Mbit/s rate

**5** You should see the CAN messages streaming on your CAN viewer (set at 1Mbit/s bit rate)